


ETC Installation Guide

ColorSource Spot jr v2.0/v3.0/v4.0

Overview

The ColorSource Spot jr provides built-in zoom capability and uses the RGB-L (red, green, blue, and lime) color system to provide a rich, bright light.

The ColorSource Spot jr is available in both original and Deep Blue variants. The Deep Blue uses an array that offers richer, more saturated blues and stronger magentas in exchange for the more jewel-toned blues like sky or turquoise. For more information, see the ETC website at etcconnect.com.

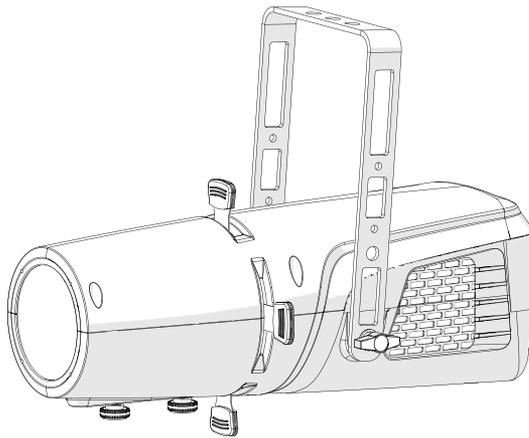

Note: Features described in this document require the latest version of software. For information on updating fixture software, see [Update the Fixture Software on page 10](#).

What's in the Box

The fixture packaging includes four extra screws. If you misplace the screws included with the accessory holder kit, use these screws to secure the accessory holder to the front of the fixture. See [Accessories on page 6](#) for more information on the accessory holder.



Corporate Headquarters ■ Middleton, WI, USA | +1 608 831 4116
Global Offices ■ London, UK | Rome, IT | Holzkirchen, DE | Paris, FR | Hong Kong
Dubai, UAE | Singapore | New York, NY | Orlando, FL | Los Angeles, CA | Austin, TX
Web etcconnect.com | **Support** support.etcconnect.com
Contact etcconnect.com/contactETC | © 2023 Electronic Theatre Controls, Inc.
Trademark and patent info: etcconnect.com/ip | Product information and specifications
subject to change. ETC intends this document to be provided in its entirety.
7416M2100-2.0 Rev D Released 2023-03

ETC Installation Guide

ColorSource Spot jr v2.0/v3.0/v4.0

Safety

For professional use only. Read the entire manual before using this equipment.



WARNING:

- Risk of eye injury. Do not stare directly into the light.
- Do not mount the fixture on or near a flammable surface.
- When the fixture is mounted, the axis between the yoke attachment points must be parallel to the ground. Mounting the fixture in a non-parallel orientation risks property damage or bodily injury.
- Disconnect the fixture from power and DMX and allow it to cool before installing accessories or performing any cleaning and maintenance.

AVERTISSEMENT :

- Risque de lésion oculaire. Ne fixez pas directement la lumière.
 - Ne pas installer le projecteur sur ou à côté d'une surface inflammable.
 - Lorsque le luminaire est accroché, l'axe entre les points de fixation de la lyre doit être parallèle au sol. Le montage du luminaire dans une orientation non parallèle risque de causer des dommages matériels ou corporels.
 - Débranchez le projecteur de son alimentation et du DMX et laissez-le refroidir avant d'installer des accessoires ou d'effectuer un nettoyage ou un entretien.
-




WARNING: RISK OF ELECTRIC SHOCK! The light source in this luminaire is not user-replaceable, and must be replaced only by a qualified technician. Contact ETC Customer Support for assistance.

AVERTISSEMENT : RISQUE DE DÉCHARGE ÉLECTRIQUE! La source lumineuse de ce projecteur n'est pas remplaçable par l'utilisateur et ne doit être remplacée seulement par un technicien qualifié. Contactez le service client ETC pour obtenir de l'assistance.

ETC Installation Guide

ColorSource Spot jr v2.0/v3.0/v4.0

The following symbols may appear on product labeling.

	The luminaire must be installed at least 0.1 m (4.0 in) away from all lighted objects.	Le luminaire doit être installé à au moins 0,1 m (4,0 po) de tout objet éclairé.
	Do not mount the fixture on or near a flammable surface.	Ne pas installer le projecteur sur ou à côté d'une surface inflammable.
	Do not stare at the operating light source.	Ne pas regarder la source de lumière lorsqu'elle fonctionne.
	This product should not be discarded as unsorted waste but must be sent to separate collection facilities for recovery and recycling.	Ce produit ne doit pas être jeté avec les déchets ménagers mais doit être déposé dans une collecte de déchets électroniques ou dans un point de collecte.

ETC Installation Guide


ColorSource Spot jr v2.0/v3.0/v4.0

Installation


Mounting

The ColorSource Spot jr ships with a standard yoke for mounting with a clamp. You can adjust the position of the yoke when necessary for low-clearance mounting. Mount the ColorSourceSpot jr in an orientation where the knobs are on the bottom. (This ensures that the accessory slot is oriented correctly, and ensures ease of movement for the Zoom knob and Focus knob.)

Standard yoke position

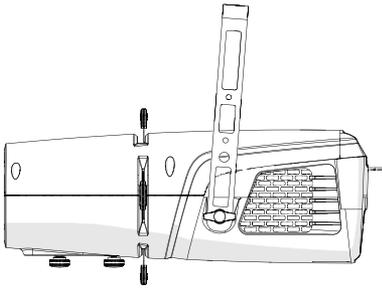


Low-clearance yoke position

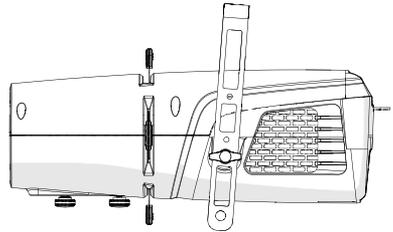

Safety Cable

A safety cable (or other approved safety device) must be attached to the fixture. The attachment loop is on the rear of the fixture. Leave as little slack as possible in the safety cable to avoid catching the yoke of the fixture.

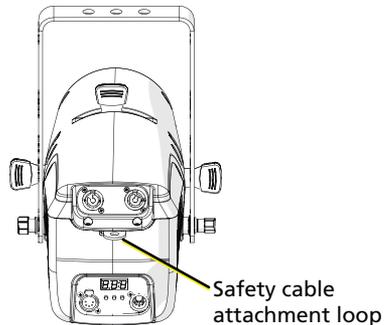

Connectors

- **Power:** Two powerCON® connectors for power in and thru
- **Data (DMX512/RDM):** Two five-pin XLR connectors for data in and thru



Note: *The ColorSource Spot jr is not self terminating. You must terminate the last fixture in line with a 120 Ohm resistor. To purchase a terminator, please contact ETC customer service and request part number SGE1507 (XLR terminator).*

ETC Installation Guide

ColorSource Spot jr v2.0/v3.0/v4.0

Set Up the Fixture

1. Plug the power cord into the powerCON In connector on the rear of the fixture.
2. Make any power-thru cable connections prior to applying a power source.
3. Make any DMX connections, and if the fixture is the last in a DMX line, terminate the fixture. See [Connectors on the previous page](#).
4. Plug the power cord into the power source.

Power Up


Press any button to wake the display. The display shows the DMX address. See [Set the DMX Address on the next page](#).

You can press the **Mode** button to access the Presets/Sequences menu. See [Play Presets and Sequences on page 8](#).

Adjust the Tilt

The fixture can be tilted up and down and rotated (panned) as needed.

1. Loosen, but do not remove the yoke locking knob.
2. Tilt the fixture to the desired angle.
3. Tighten the yoke locking knob.

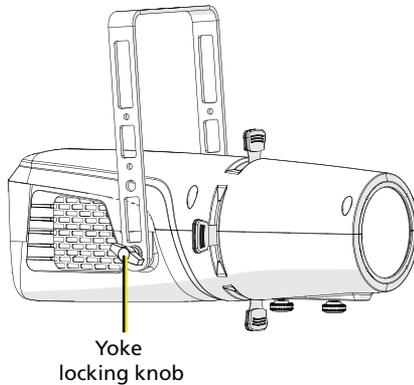


ETC Installation Guide

ColorSource Spot jr v2.0/v3.0/v4.0

Adjust the Zoom and Focus the Fixture

Use the Zoom knob to adjust the 25°–50° zoom, and use the Focus knob to adjust the field. Because the Zoom knob and Focus knob are easiest to adjust when on the bottom of the fixture, avoid mounting the ColorSourceSpot jr in an orientation where the knobs are on top.

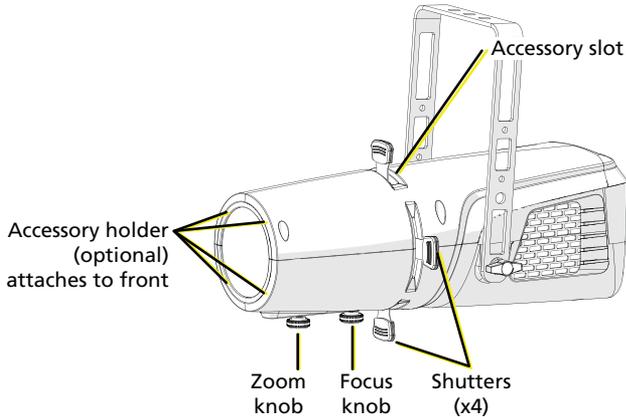

Accessories

You can use standard accessories, such as a gobo, in the accessory slot (see image above). You can also attach an accessory holder to the front of the fixture (order part number 7416K1001). After you attach the accessory holder, you can use it to secure accessories such as a top hat or half hat. See the ColorSource Spot jr datasheet at etconnect.com for accessory information.

You can attach a ColorSource Relay to the yoke. See etconnect.com for more information about ColorSource Relay.

Set the DMX Address

1. Press any button to wake the display. The display shows the DMX address.
2. Use the **Up** and **Down** buttons to select the DMX address for the fixture.

You can also use RDM for DMX addressing. See [RDM Values on page 14](#).

ETC Installation Guide

ColorSource Spot jr v2.0/v3.0/v4.0

Change the DMX Control Mode

You can set the DMX control mode for the fixture to one of four available mode options.

1. Press any button to wake the display. The display shows the DMX address.
2. Press and hold the **Mode** button for 3 seconds. The display shows the current DMX control mode.
3. Press the **Up** button or **Down** button to change the DMX control mode. (The currently saved mode is indicated by a decimal point at the end of the mode name.)
 - **5ch**: 5-channel mode (intensity, red, green, blue, and strobe). This is the default mode.
 - **d ir**: Direct emitter control (intensity, red, green, blue/indigo, lime, and strobe).
 - **lch**: 1-channel mode controls the intensity of preset 1 (defaults to 3200 K White).
 - **r9b**: RGB mode (red, green, and blue).
4. Press the **Mode** button to confirm your selection.

The display will automatically return to the DMX address after 10 seconds of inactivity, and edits to the DMX control mode will not be saved. This cancels unsaved changes.

DMX Control Channels

DMX Channel	5ch (5 channel)	d ir (Direct)	lch (1 Channel)	r9b (RGB)
1	Intensity	Intensity	Intensity	Red
2	Red	Red		Green
3	Green	Green		Blue
4	Blue	Blue/Indigo*		
5	Strobe**	Lime		
6		Strobe**		

*Original ColorSource Spot jr fixture uses blue in channel 4; Deep Blue fixture uses indigo in channel 4.

**Use DMX values of 0 or 255 for no strobe. Use values of 1–254 to increase the strobe rate from 1 per second up to 33 per second.

ETC Installation Guide

ColorSource Spot jr v2.0/v3.0/v4.0

Data Loss Behavior

When DMX data is lost, the fixture does one of the following actions:

- If you selected a preset or sequence, that preset or sequence automatically plays.
- If no preset or sequence is active in the background, the fixture goes dark and the DMX start address flashes on the user interface.

Lock the User Interface

After you have set up the fixture, you can lock the user interface to prevent additional changes.

1. Press and hold the **Up** button and **Down** button simultaneously for 3 seconds. The display will show **Loc** to indicate that the user interface is locked.
2. To unlock the user interface, press and hold the **Up** button and **Down** button simultaneously for 3 seconds.

Play Presets and Sequences

The fixture has twelve factory-configured presets and five factory-configured sequences. When you play a preset or sequence on a fixture:

- The same preset number or sequence number plays on any connected fixtures that are not receiving DMX.
- If you power down the fixture, the preset or sequence resumes when you power it on again.

You can re-record presets and sequences through an RDM device or manually on the fixture. See [Re-record Presets on the facing page](#).

1. Press the **Mode** button to activate the Presets/Sequences menu. The last active preset or sequence plays automatically. (If DMX data is present, the current preset or sequence plays in the background and DMX data continues to take priority.)
2. Press the **Up** button or **Down** button as needed to scroll through the available presets and sequences.
3. To stop the selected preset or sequence, press the **Mode** button a second time. The display will revert to show the DMX start address.

ETC Installation Guide

ColorSource Spot jr v2.0/v3.0/v4.0

Pre-configured Presets

Preset	Name
1	3200 K White
2	5600 K White
3	Red
4	Green
5	Blue
6	Cyan

Preset	Name
7	Magenta
8	Yellow
9	Orange
10	Light Yellow
11	Light Blue
12	Light Pink

Pre-configured Sequences

Sequence	Name
1	Rainbow Fast
2	Rainbow Slow
3	Warm Colors Fast
4	Cool Colors Fast
5	Random

Re-record Presets

1. Using DMX, set the desired levels for the new preset.
2. Press the **Mode** button to access the Presets/Sequences menu.
3. Press the **Up** button or **Down** button to navigate to the preset number that you want to re-record.
4. Press and hold the **Mode** button for 3 seconds to confirm the preset selection. The user interface will show a 3-second countdown. The preset number blinks once to confirm that the preset has been recorded.



Note: When the fixture is in Direct mode (**d ir**) or 1-channel mode (**lch**), you cannot re-record presets.

When you re-record presets with the fixture in RGB mode (**r9b**), the intensity is set to full and the strobe is turned off.

See [Change the DMX Control Mode on page 7](#).

ETC Installation Guide

ColorSource Spot jr v2.0/v3.0/v4.0

Adjust the Intensity of Presets

1. Ensure that DMX data is not present.
2. Press the **Mode** button to access the Presets/Sequences menu, and then press the **Up** button or **Down** button to select the preset that you want to edit.
3. Press and hold the **Mode** button for 3 seconds. The display shows **L=** followed by either an intensity level from **0-99** or **FL** for full.
4. Press the **Up** button or **Down** button to change the intensity level of the preset in real time.
5. Press the **Mode** button to confirm your selection and return to the Presets/Sequences menu. (If you don't press the **Mode** button, the display returns to the Presets menu after 10 seconds without saving your changes.)

Troubleshooting

Update the Fixture Software

ETC recommends using UpdaterAator software to manage software updates. For information on UpdaterAator, see the *UpdaterAator Software Quick Guide* and the *UpdaterAator Software Release Note*, which you can download from etconnect.com.

You can push newer software versions from a connected fixture to selected ColorSource fixtures (see table that follows).



Note: *If you have other types of fixtures in your DMX run, you do not need to disconnect them before pushing the updated fixture software. The update process will ignore any other fixture types in the DMX run.*



Note: *Not sure what version of fixture software is installed? The version number appears on the display when the fixture powers up.*

ETC Installation Guide

ColorSource Spot jr v2.0/v3.0/v4.0

This fixture...	...can push software to these fixtures/releases when connected											
	CYC			Linear	PAR			Spot		Spot jr		
	≤v1.7	v3.1	v4.0	≤v1.7	≤v1.7	v3.0	v4.0	≤v1.7	v3.0	v2.0	v3.0	v4.0
CYC v1.7 or earlier	X			X	X			X				
CYC v3.1		X										
CYC v4.0			X									
Linear v1.7 or earlier	X			X	X			X				
PAR v1.7 or earlier	X			X	X			X				
PAR v3.0						X			X			
PAR v4.0							X					
Spot v1.7 or earlier	X			X	X			X				
Spot v3.0						X			X			
Spot jr v2.0										X		
Spot jr v3.0											X	
Spot jr v4.0												X

1. Remove power and DMX In from the fixture that is running the software version that you want to push to other fixtures.
2. Press and hold the **Up** button and **Down** button simultaneously while restoring power.
3. The display shows **Udt rdy** to indicate the update mode is selected.

ETC Installation Guide

ColorSource Spot jr v2.0/v3.0/v4.0

4. Press the **Mode** button to start the update process.
 - The first time that you push an updated software version, additional required files must be copied before the update can begin. The display alternates between **Udt** and **c=HH** to indicate the percentage complete while required data is copied.
 - The display alternates between **Udt** and the percentage complete while updating the connected fixtures.
 - The display blinks once to indicate that the update is complete.
5. Reconnect DMX In on the fixture.

Restore Factory Defaults

Press and hold the **Mode** button, **Up** button, and **Down** button simultaneously for 5 seconds. The DMX start address will blink once to confirm that defaults have been restored.

Error Codes

These error codes may display on the user interface.

- **CAL**: Screen toggles between **CAL** and **Err** to indicate a problem with the color calibration. The fixture will need to be returned to the ETC factory; contact your local dealer to set up a repair.
- **OtP**: Screen toggles between **OtP** and **Err** to indicate that the fixture has gone into over-temperature protection mode to avoid damaging the fixture. Once the fixture has self-cooled, the error will automatically clear. If the error does not clear, contact ETC Technical Support (visit etconnect.com/contactETC).
- **no APP**: Screen toggles between **no** and **APP** to indicate that the upgraded fixtures have a software issue. Reload software to clear the error. If the error persists, contact ETC Technical Support (visit etconnect.com/contactETC).

ETC Installation Guide

ColorSource Spot jr v2.0/v3.0/v4.0

Specifications and Reference

For current and complete compliance and specifications, see the ColorSource Spot jr datasheet at etconnect.com.

Environment

The ColorSource Spot jr operates in ambient temperatures of 0°C–40°C and comes with a variable-speed fan. The ColorSource Spot jr is for indoor use only.

- Maximum recommended ambient operating temperature:
Ta = 40°C (104°F)
- Maximum anticipated external surface temperature at 40°C ambient: Tmax = 48°C (119°F)
- External temperatures after 5 minutes of full-brightness operation at 25°C (77°F) ambient: 42°C (108°F)
- External Temperature (steady state achieved) at 25°C (77°F): 42°C (108°F)

Electrical

- Operates between 100 V and 240 VAC at a frequency of 50/60 Hz.
- Maximum power consumption is 200 W.
- Up to 7 luminaires (15 A max) may be linked via power thru connector (8 luminaires total per circuit) when used with an R20 Relay Module or Unison Echo Relay Panel. Consult breaker trip curves when used with other equipment. Requires power from a non-dimmable source.
- Inrush:
 - 120 V: 35 A (first half-cycle)
 - 240 V: 45 A (first half-cycle)

Typical Power Consumption

	100 V		120 V		230 V	
	Power	Current	Power	Current	Power	Current
Idle	2.1 W	0.05 A	2.6 W	0.05 A	2 W	0.06 A
Direct at Full	168 W	1.69 A	166 W	1.40 A	162 W	0.73 A

ETC Installation Guide

ColorSource Spot jr v2.0/v3.0/v4.0

RDM Values

Parameter	Fixture	Value	Description
Manufacturer ID	All	0x6574	Electronic Theatre Controls
Model ID	ColorSource Spot jr	0x0219	ColorSource Spot jr (v2.0), ColorSource Spot jr CPU2 (v3.0), or ColorSource Spot jr CPU3 (v4.0)
	ColorSource Spot jr Deep Blue	0x021A	ColorSource Spot jr Deep Blue (v2.0), ColorSource Spot jr DB CPU2 (v3.0), or ColorSource Spot jr DB CPU3 (v4.0)
DMX Start Address	All	0x00F0	Range = 1–512
DMX Personality	All	0x00E0	1 = 5 Channel 2 = Direct 3 = 1 Channel 4 = RGB
Output Frequency	All	0x8123	0 = Standard (1.2 kHz) 1 = High (25 kHz)

ETC Installation Guide

ColorSource Spot jr v2.0/v3.0/v4.0

FCC Compliance

ColorSource Spot jr

(For any FCC matters):

Electronic Theatre Controls, Inc.
3031 Pleasant View Road
Middleton, WI 53562
+1 (608) 831-4116
etconnect.com

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received; including interference that may cause undesired operation. Visit etconnect.com/products for current and complete compliance information including FCC compliance.



Note: *This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Any modifications or changes to this product not expressly approved by Electronic Theatre Controls, Inc. could void the user's authority to operate the product. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at their own expense.*

ETC Installation Guide

ColorSource Spot jr v2.0/v3.0/v4.0

Quick Reference

DMX Control Channels

DMX Channel	<i>Sch</i> (5 channel)	<i>dir</i> (Direct)	<i>lch</i> (1 Channel)	<i>rgb</i> (RGB)
1	Intensity	Intensity	Intensity	Red
2	Red	Red		Green
3	Green	Green		Blue
4	Blue	Blue/Indigo*		
5	Strobe**	Lime		
6		Strobe**		

*Original ColorSource Spot jr fixture uses blue in channel 4; Deep Blue fixture uses indigo in channel 4.

**Use DMX values of 0 or 255 for no strobe. Use values of 1–254 to increase the strobe rate from 1 per second up to 33 per second.

Error Codes

These error codes may display on the user interface.

- **CAL**: Screen toggles between **CAL** and **Err** to indicate a problem with the color calibration. The fixture will need to be returned to the ETC factory; contact your local dealer to set up a repair.
- **OTP**: Screen toggles between **OTP** and **Err** to indicate that the fixture has gone into over-temperature protection mode to avoid damaging the fixture. Once the fixture has self-cooled, the error will automatically clear. If the error does not clear, contact ETC Technical Support (visit etconnect.com/contactETC).
- **no APP**: Screen toggles between **no** and **APP** to indicate that the upgraded fixtures have a software issue. Reload software to clear the error. If the error persists, contact ETC Technical Support (visit etconnect.com/contactETC).